

HOBO Data Receiver - ZW-RCVR



Qty	1-9	10-99	100+
\$US	\$219	\$204	\$186

Contact Onset at 1-800-564-4377

Description:

The HOBO[®] data receiver collects incoming logged sensor data from HOBO data nodes and transfers the data to the computer via USB cable.

Features:

- Simple USB connection to PC
- Sends commands to HOBO data nodes as needed
- Retains all data node network parameters and settings

Price includes: [HOBOWare[®] Pro software](#) disc; mounting stand; USB connection cable; batteries; wall mounting accessories; setup guide and power adapter.

Complete system requires a HOBO data receiver (ZW-RCVR) and one or more [indoor wireless HOBO data nodes](#). Depending on your system deployment, a [HOBO data router](#) (ZW-ROUTER) may be required.

Detailed Specifications:

Buffer Memory - up to 96k measurements

Sample rate - N/A

Transmission rate - N/A

Operating Range -

Temp: -20 to 50[°]C (-4 to 122[°]F) when battery powered, -20 to 70[°]C (-4 to 158[°]F) when line powered.

RH: 5%-95% non-condensing

Power Options - AC power adapter (Onset p/n AC-ZW-2 (US) or AC-ZW-3 (EU); via USB cabled to PC; (3) alkaline AAA batteries included.

Range - Approx. 100 m (300 ft.) depending on obstructions or interference

Weight - 138 g (4.87 oz.) w/ batteries

Size - 96.5 x 108 x 28 mm (3.8 x 4.25 x 1.1 in.)

Max # of Nodes Supported - 100

Radio power - 1.6 mW (2 dBm)

Wireless data standard - IEEE 802.15.4 2.4 GHz band

CE - The CE Marking identifies this product as complying with all relevant directives in the European Union (EU)

HOBO[®] Data Loggers

1-800-LOGGERS