

Ion Science VOC Monitor Connection Instructions

For use with HOBO® H22, U30, U12 and UX120-006M data loggers and HOBO ZW data nodes

Applies to this Ion Science VOC Monitor:

Onset Part No.	Output	Ion Science Part No.
T-ION-TVOC	4-20mA representing 0 to 10/100/1000 ppm	TVOC

⚠ WARNING! All Onset devices listed in this document are **NOT** intrinsically safe and should **NOT** be used in hazardous areas!

This document provides instructions on connecting the Ion Science VOC Monitor listed above to each of the following:

- FlexSmart™ Analog Module used with HOBO H22 series data loggers
- Analog Sensor Port option used with HOBO U30 series loggers.
- 4-20mA cable used with the HOBO U12 and UX120-006M data loggers and HOBO ZW data nodes

It also lists configuration values used by HOBOWare® Pro software to configure the logger for the monitor. **Note:** For VOC monitor details, refer to the documentation provided by Ion Science.




Ion Science VOC Monitor

Required:

- Ion Science VOC Monitor listed above
- HOBO H22, U12, U30, or UX120-006M data logger, or HOBO ZW data node
- FlexSmart Analog Module, Onset Part No: S-FS-CVIA (for H22 series); Analog Sensor Port option (for U30 series); 4-20mA cable, Onset Part No. CABLE-4-20mA or voltage adapter, Onset Part No. CABLE-ADAP5 (for U12, UX120-006M, or ZW series)
- HOBOWare Pro Software, version 2.2.1 or higher (2.4.0 or higher for U30 series; 3.0 or higher for ZW series; 3.6 or higher for UX120-006M)
- Customer-supplied lengths of hook-up wire



Connecting the VOC Monitor to the Analog Module or Port:

H22 or U30 Connection

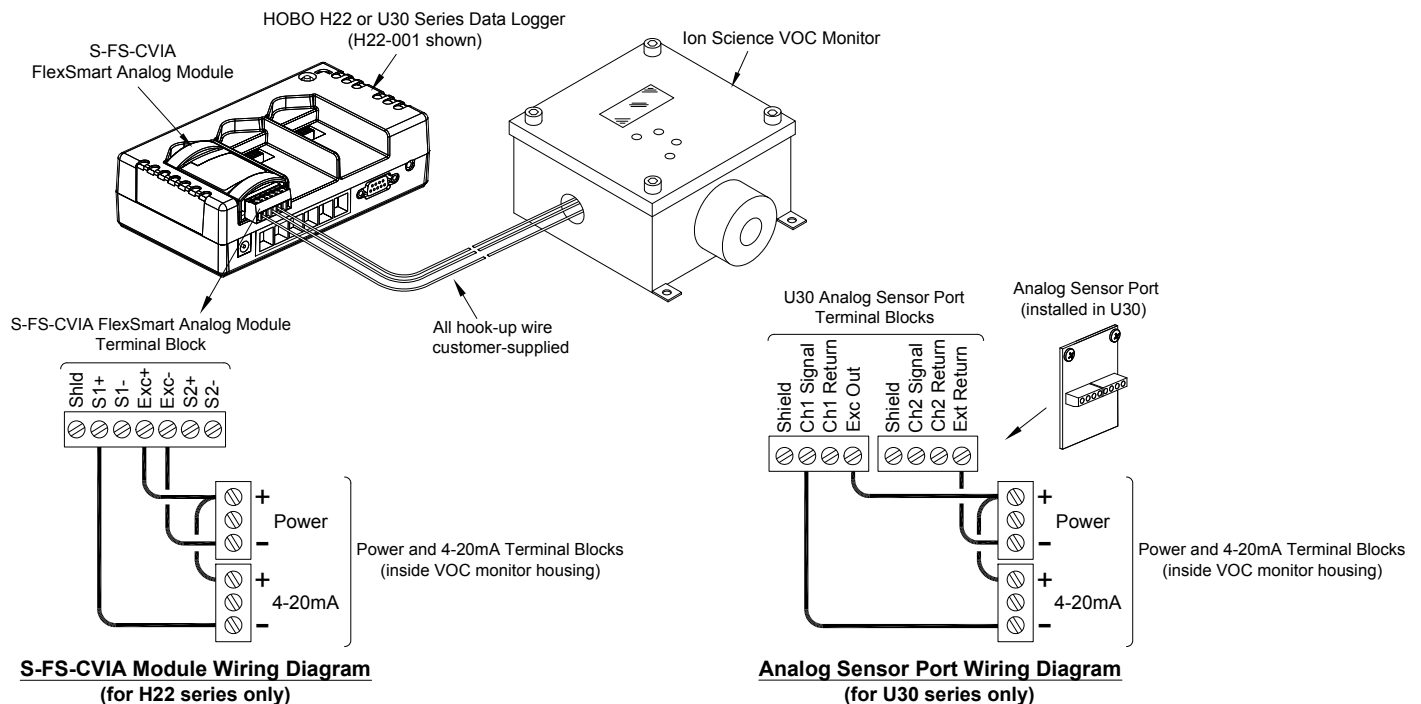

Ion Science VOC Monitor Connection Instructions

U12, ZW, or UX120-006M Connection

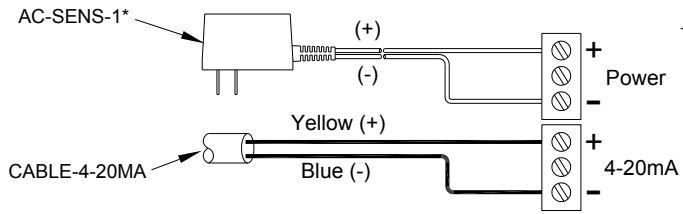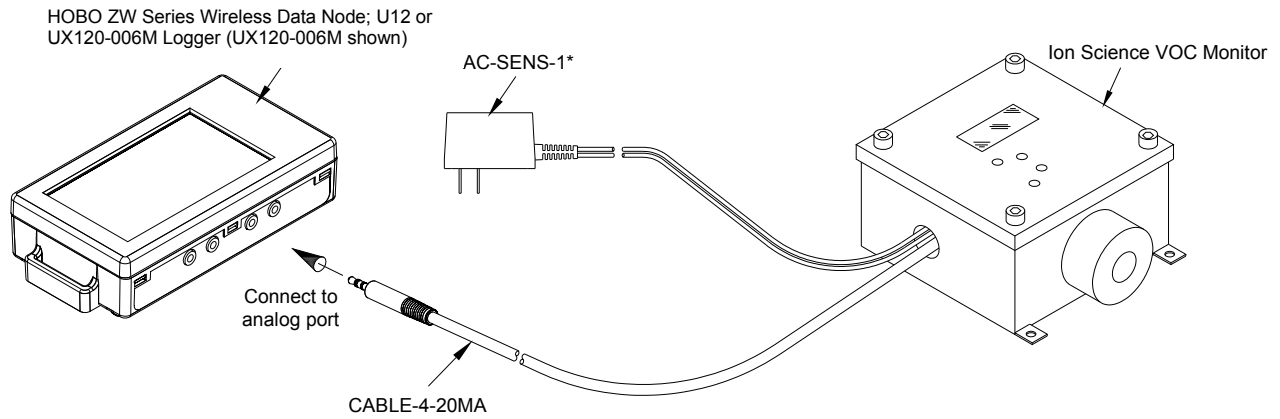

***CAUTION:** Polarity is very important!
Before plugging AC-SENS-1 into AC power, **make sure** the correct polarity lead connections to device are made as shown!

Power and 4-20mA Terminal Blocks
 (inside VOC monitor housing)

Configuring the Data Logger for the VOC Monitor, using HOBOWare Pro Software:

Note: HOBOWare Pro software provides a configuration file for the monitor. The table below lists the recommended configuration values that this file contains. For information on loading configuration files, refer to the software documentation.

Channel Name	Warm-Up*	Measurement Type	Raw Value 1	Raw Value 2	Raw Units	Scaled Value 1	Scaled Value 2	Scaled Units
VOC	Continuous	Current	4	20	mA	0	10 (or 100 or 1000)	ppm

*Loop power of 22 mA can be provided by the FlexSmart Analog Module and H22 (or Analog Sensor Port and U30). Lamp and electronics require 65 mA. **Note:** Providing continuous warm-up excitation power will accelerate data logger battery depletion. Therefore, we recommend using the appropriate Onset AC power adapter to power the logger.